

Installation Notice FG-A



1 FG-A Alarm Unit Description

- The FG-A Alarm Unit is designed for use with TTK analog sense cables: FG-ECX, FG-ACX, FG-ECS and FG-ACS, it detects leaks of liquids. The appearance of a fault (leak or cable-break) is detected as follows:
 - A sound alarm is triggered;
 - A light-emitting diode comes on;
 - A dry contact is activated to transmit the alarm information to remote monitoring equipment.

To stop the sound alarm, press the central button. The diode and the dry contact remain activated for as long as the fault is present.

When the fault disappears, the diode switches off and the relay returns to its original normal status.

2 Panel Mounting

Caution: All connector blocks must be connected with the FG-A Alarm Unit supply switched off.

- Wall-Mounted Version:

Two of the three cable glands are placed on the FG-A Alarm Unit; the last gland can be screwed in the position of plug PG7.

Use the four fixing holes in the lower part of the unit box. The diode and the dry contact remain activated for as long as the fault is present. These two parts can be easily dismantled after mural fixing. Remove the upper part with the PCB (printed circuit board) carefully.

FG-A Alarm Unit, wall-mounted version, contains:

- 1 FG-A Alarm Unit
- 3 PG Cable Glands: 2 PG7 + 1 PG9
- 1 Plug PG7
- Installation Notice

3 Connection

<p>1. Power Connection</p>	<p>There are three possibilities for power connection: 12 to 24 V AC / 15 to 30 V DC / 100-240 V AC 50/60 Hz. The maximum cable section is 14 AWG for 100-240 V AC and 18 AWG for 12-24 V AC and 15-30 V DC. There is no requirement to respect the polarity in 12/24 V. Use PG9 cable gland for the 230-V cable.</p>
<p>2. Connecting the Relays</p>	<p>Simple relay: COM-NO-NC Maximum switching voltage: 125 V AC / 220 V DC Maximum switching capacity: 60 W (30 V x 2 A) Maximum switched intensity: 2A Minimum working load: 5 V DC - 1 mA The relays are free of potential. The maximum cable section is 14 AWG.</p> <p>- Dry Contact for Leak: The leak contact transfers information regarding a leak to a PC (or controller), allowing automated control of the equipment.</p> <p>- Dry Contact for Cable Break: A specific contact will be activated when a cable break occurs. A power outage will also activate the contact.</p>

4 Connecting the Sense Cable

■ Connecting Sense Cables FG-ECS or FG-ACS:

A junction with a length of 3.5 meters (11.5 ft) of Belden jumper cable on each length of FG-ECS and FG-ACS, will allow simple connection to the FG-A alarm unit.




■ Connecting Sense Cables FG-ECS or FG-ACS:

Connect the FG-CLC leader cable, refer to "FG-SYS installation guide" chapter 1, section 3.3 "Connection of FG-CLC leader cable".

The FG-CLC leader cable, connected to the FG-A alarm unit with a female connector, at its extremity. The beginning of the sense cable thus corresponds with a male connector at its far end.

Connect the first sense cable to the leader cable coming from the FG-A alarm unit.

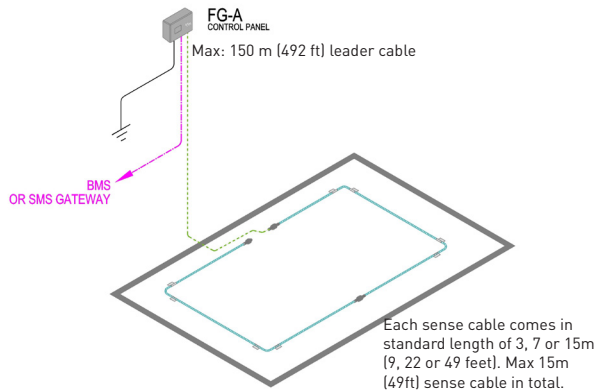

Sensitivity

- The sensitivity of the unit is adjustable via the potentiometer on the PCB.
 - Clockwise : more sensitive
 - Counter-clockwise : less sensitive

6 Start-Up Guide

Normal Operation	<ul style="list-style-type: none"> - Switch on the FG-A alarm unit - A sound alarm is triggered, 3 diodes come on. This is the general test of the circuit board. - The alarm turns off, the green diode remains on. - The alarm unit is operating.
Simulation of Leak	<ul style="list-style-type: none"> - Place water directly on the sense cable. - The red diode comes on and the sound alarm leak contact are both activated. - Press the button to switch off the sound alarm. - Soak up the water with a dry duster. - The red diode goes off and the dry contact returns to its normal position.
Simulation of Cable Break	<ul style="list-style-type: none"> - Disconnect the sense cable from the FG-A alarm unit, block A, B, C and D. - The yellow diode comes on and the sound alarm leak contact are both activated. - Press the button to switch off the sound alarm. - Connect the cable to the FG-A alarm unit. - The yellow diode goes off and the dry contact returns to its normal position.

5 Connecting the Motherboard

Power supply: 100-240 V AC 50/60 Hz	N: Neutral P: Live ⊕: Earth
Power supply: 12-24 V AC 15-30 V DC	Polarity not required
Cable Break Relay and/or Power Relay	R1: COM R2: NO R3: NC
Leak Relay	R4: COM R5: NO R6: NC
FG-CLC Leader Cable	A: Green B: White C: Black D: Red

7 After Installation: ABC Steps

- Produce a clear and precise installation drawing and place it close to the FG-A Alarm Unit.
- Make sure that the following documents are available to the Client:
 - FG-A alarm unit data sheet
 - Drawing of the installation
 - Installation Notice
- Inform the Client that it is advisable to perform maintenance operation twice per year on the system.

Company _____

Operator name _____ Date ____/____/____

Although carefully prepared to ensure technical accuracy, this brochure is intended for promotional use only. TTK cannot guarantee that the information contained herein is free of errors or omissions, and hence does not accept liability related to the use of its equipment. TTK maintains its obligations set out in the Standard Terms and Conditions of Sale and will not, under any circumstances, assume liability for any incidental damages, indirect or consequential, arising from the sale, resale, use or misuse of this product. All purchasers accept their responsibility as sole judge of the suitability of the product for the intended use.

FG-NET, FG-SYS and TOPSurveillance are trademarks of TTK S.A.S. © TTK 2024

- **TTK Headquarters** / 19 Rue du Général Foy / 75008 Paris / France / T: +33 1.56.76.90.10 / F: +33 1.55.90.62.15 / www.ttk.fr / ventes@ttk.fr
- **TTK UK Ltd.** / 3 Luke Street / London EC2A 4PX / United Kingdom / T: +44 20 7729 6002 / F: +44 20 7729 6003 / www.ttkuk.com / sales@ttkuk.com
- **TTK Pte Ltd.** / #09-05, Shenton House, 3 Shenton Way / Singapore 068805 / T: +65 6220.2068 / M: +65 9271.6191 / F: +65 6220.2026 / www.ttk.sg / sales@ttk.sg
- **TTK Asia Ltd.** / 2107-2108 Kai Tak Commercial Building / 317 Des Voeux Road Central / Hong Kong / T: +852 2858.7128 / F: +852 2858.8428 / www.ttkasia.com / info@ttkasia.com
- **TTK Middle East FZCO** / Building 6EA, Office 510 PO Box 54925 / Dubai Airport Free Zone / UAE / T: +971 4 70 17 553 / M: +971 50 259 66 29 / www.ttkuk.com / cgalmiche@ttk.fr
- **TTK Deutschland GmbH** / Berner Strasse 34 / 60437 Frankfurt / Germany / T: +49 (0)69-95005630 / F: +49(0)69-95005640 / www.ttk-gmbh.de / vertrieb@ttk-gmbh.de
- **TTK North America Inc** / 1730 St Laurent Boulevard Suite 800 / Ottawa, ON, K1G 5L1 / Canada / T: +1 613 566 5968 / www.ttkcanada.com / info@ttkcanada.com